

# CAT® TRANSMISSION TOOLING – 416F / 420F

**REPAIR OPTION:** Rebearing and Resealing Transmission

**DIRECT DRIVE TRANSMISSION**

**MACHINE MODELS:** 416F / 420F

Part Number	Quantity	Description
155-3597	4	WHEEL CHOCK
1U-7505	1	JACK
1U-7498	4	SUPPORT STAND ASSEMBLY
1U-9745	1	AIR/HYDRAULIC JACK GROUP
1U-9330	1	HYDRAULIC JACK
1U-7558	2	MOUNTING ADAPTER GROUP
1U-5750	1	ENGINE STAND
6V-2157	2	LINK BRACKET
6V-3009	1	CROSSBAR
126-7181	4	SLIDING PLATE
6V-4832	1	FORCING SCREW
8H-0663	1	BEARING PULLER GROUP
126-7178	2	PULLER LEG
4C-3652	1	SPRING COMPRESSOR
1U-6400	1	THREE JAW PULLER
8B-7551	1	BEARING PULLER GROUP
1P-1859	1	RETAINING RING PLIERS
8T-5096	1	INDICATOR
1P-0510	1	DRIVER GROUP
–	1	LOCTITE RETAINING COMPOUND 620
1H-9721	1	EXPANSION PLUG
1U-6343	1	THREADED ROD 8"
6V-8149	1	NUT
8S-7640	2	STAND
8S-7611	2	TUBE
8S-7615	2	PIN
1U-9760	2	JACK STAND
FT-2535	1	ENGINE SUPPORT BAR ASSEMBLY
155-3597	4	WHEEL CHOCK

**BUILT FOR IT.™**

cat.com

© 2017 Caterpillar. All Rights Reserved. CAT, CATERPILLAR, BUILT FOR IT, their respective logos, "Caterpillar Yellow," the "Power Edge" trade dress, as well as corporate and product identity used herein, are trademarks of Caterpillar and may not be used without permission.

